

## STULL FEEDERS WARRANTY

**Your Stull Feeder is covered by a one (1) year Limited Parts Warranty on material and workmanship from date of original purchase. Purchase must have been made through an Authorized Dealer. This warranty covers defects in workmanship and materials. This warranty does not apply to units damaged due to intentional abuse. Auger and Drag Feeder units are designed for bolting to a flat surface. If mounted on load cells for a scale you must use extra metal between load cell and bottom ends of feeder for reinforcement. We offer this for each feeder if not already installed. Failure to do so will void Warranty! Our auger feeders will dispense most types of feed/cubes, but may not all. Warranty does not cover this issue. An In-line Fuse of 50 amps for 300/600 Auger Feeders, 60 amps for the Truck Auger Feeders and 600 lb Drag Feeder is recommended but may not be provided.**

**A purchase from individuals, unauthorized dealers, or unauthorized Internet sites voids the warranty.**

**Scales are water resistant but not waterproof! Please do not pressure wash directly on scale monitor, connectors or junction box! FAILURE TO COMPLY WILL VOID WARRANTY! THIS SCALE SYSTEM MUST BE MOUNTED TO A SOLID FLAT SURFACE TO OPERATE CORRECTLY!! FAILURE TO DO SO WILL VOID WARRANTY!!**

**THIS WARRANTY DOES NOT APPLY TO CORROSION, RUST, ETC. AFFILIATED WITH PRODUCTS USED CONTAINING EXTREME SALT CONTENT.**

**Return authorization must be obtained from Customer Service at 800-369-4131 prior to returning product.**

**\*\*NOTE: There will be a 20% restocking fee on all returned feeders not associated to warranty issues.**

**www.stullfeeders.com**

**PLEASE RETURN BOTTOM PORTION WITHIN 30 DAYS OF PURCHASE. THANK YOU.**

## PRODUCT REGISTRATION

**STULL FEEDERS, INC.**

**First Name:**

**Initial:**

***Last Name:***

**Street:**

Apt. #:

**State:**

**Zip:**

***E-Mail Address:***

**Phone #:**

***Date of Purchase:***

**Where Purchased:**

**Item Purchased:**

Serial #

**Send Product Registration to:**

**STULL FEEDERS, INC.**  
**1595 Mountain Vista Rd., Harrison, AR 72601**



Start by disconnecting your battery! We have included 20' of power cable with the bonded ground for you to run from your vehicle battery to the feeder. Next, we have included 20' of Switch Cord to run from your cab to the feeder. It is recommended to put an in-line fuse of 60 Amps (NOT INCLUDED) between the BREAKER and power source. You can cut off alligator clips and install connectors to fit your requirements. Attach the RED wire coming from battery to the TOP right stud on BREAKER and then the BLACK Ground coming from your BATTERY (BLACK BATTERY WIRE) to the feeder above solenoid by loosening the NUT and installing it there. Next "WHEN INSTALLED YOU CAN SIMPLY PLUG SWITCH PLUG INTO PLUG COMING OFF SOLENOID". In case of separation wire the BLACK wire coming off the switch wire to the LEFT side of solenoid on the 5/16 stud with White wire coming from BREAKER. Attach the WHITE/GREEN wire coming off the switch wire to the little stud on front of solenoid. Once everything is tightened you are ready to connect it to power. If you have any questions please call 1-800-369-4131!

YOU CAN ADJUST AUGER COVER UP/DOWN TO INCREASE/REDUCE FLOW OF FEEDS OR TO PREVENT CLOGGING OF DIFFERENT FEEDS BY LOOSENING THE 2 BOLTS ON BOTH SIDES AND SIMPLY RAISING/LOWERING COVER AND ONCE YOU GET TO DESIRED POSITION TIGHTEN BACK DOWN. ANY QUESTIONS PLEASE CALL  
1-800-369-4131