

## STULL FEEDERS WARRANTY

Your Stull Feeder is covered by a one (1) year Limited Parts Warranty on material and workmanship from date of original purchase. Purchase must have been made through an Authorized Dealer. This warranty covers defects in workmanship and materials. This warranty does not apply to units damaged due to intentional abuse. Auger and Drag Feeder units are designed for bolting to a flat surface. If mounted on load cells for a scale you must use extra metal between load cell and bottom ends of feeder for reinforcement. We offer this for each feeder if not already installed. Failure to do so will void Warranty! Our auger feeders will dispense most types of feed/cubes, but may not all. Warranty does not cover this issue. An In-line Fuse of 50 amps for 300/600 Auger Feeders, 60 amps for the Truck Auger Feeders and 600 lb Drag Feeder is recommended but may not be provided.

A purchase from individuals, unauthorized dealers, or unauthorized Internet sites voids the warranty.

Scales are water resistant but not waterproof! Please do not pressure wash directly on scale monitor, connectors or junction box! FAILURE TO COMPLY WILL VOID WARRANTY! THIS SCALE SYSTEM MUST BE MOUNTED TO A SOLID FLAT SURFACE TO OPERATE CORRECTLY!! FAILURE TO DO SO WILL VOID WARRANTY!!

THIS WARRANTY DOES NOT APPLY TO CORROSION, RUST, ETC. AFFILIATED WITH PRODUCTS USED CONTAINING EXTREME SALT CONTENT.

Return authorization must be obtained from Customer Service at 800-369-4131 prior to returning product.

**\*\*NOTE:** There will be a 20% restocking fee on all returned feeders not associated to warranty issues.

[www.stullfeeders.com](http://www.stullfeeders.com)

PLEASE RETURN BOTTOM PORTION WITHIN 30 DAYS OF PURCHASE. THANK YOU.

### PRODUCT REGISTRATION

STULL FEEDERS, INC.

*First Name:*

*Initial:*

*Last Name:*

*Street:*

*Apt. #:*

*State:*

*Zip:*

*E-Mail Address:*

*Phone #:*

*Date of Purchase:*


*Where Purchased:*

*Item Purchased:*

*Serial #*

Send Product Registration to:

STULL FEEDERS, INC.  
1595 Mountain Vista Rd., Harrison, AR 72601

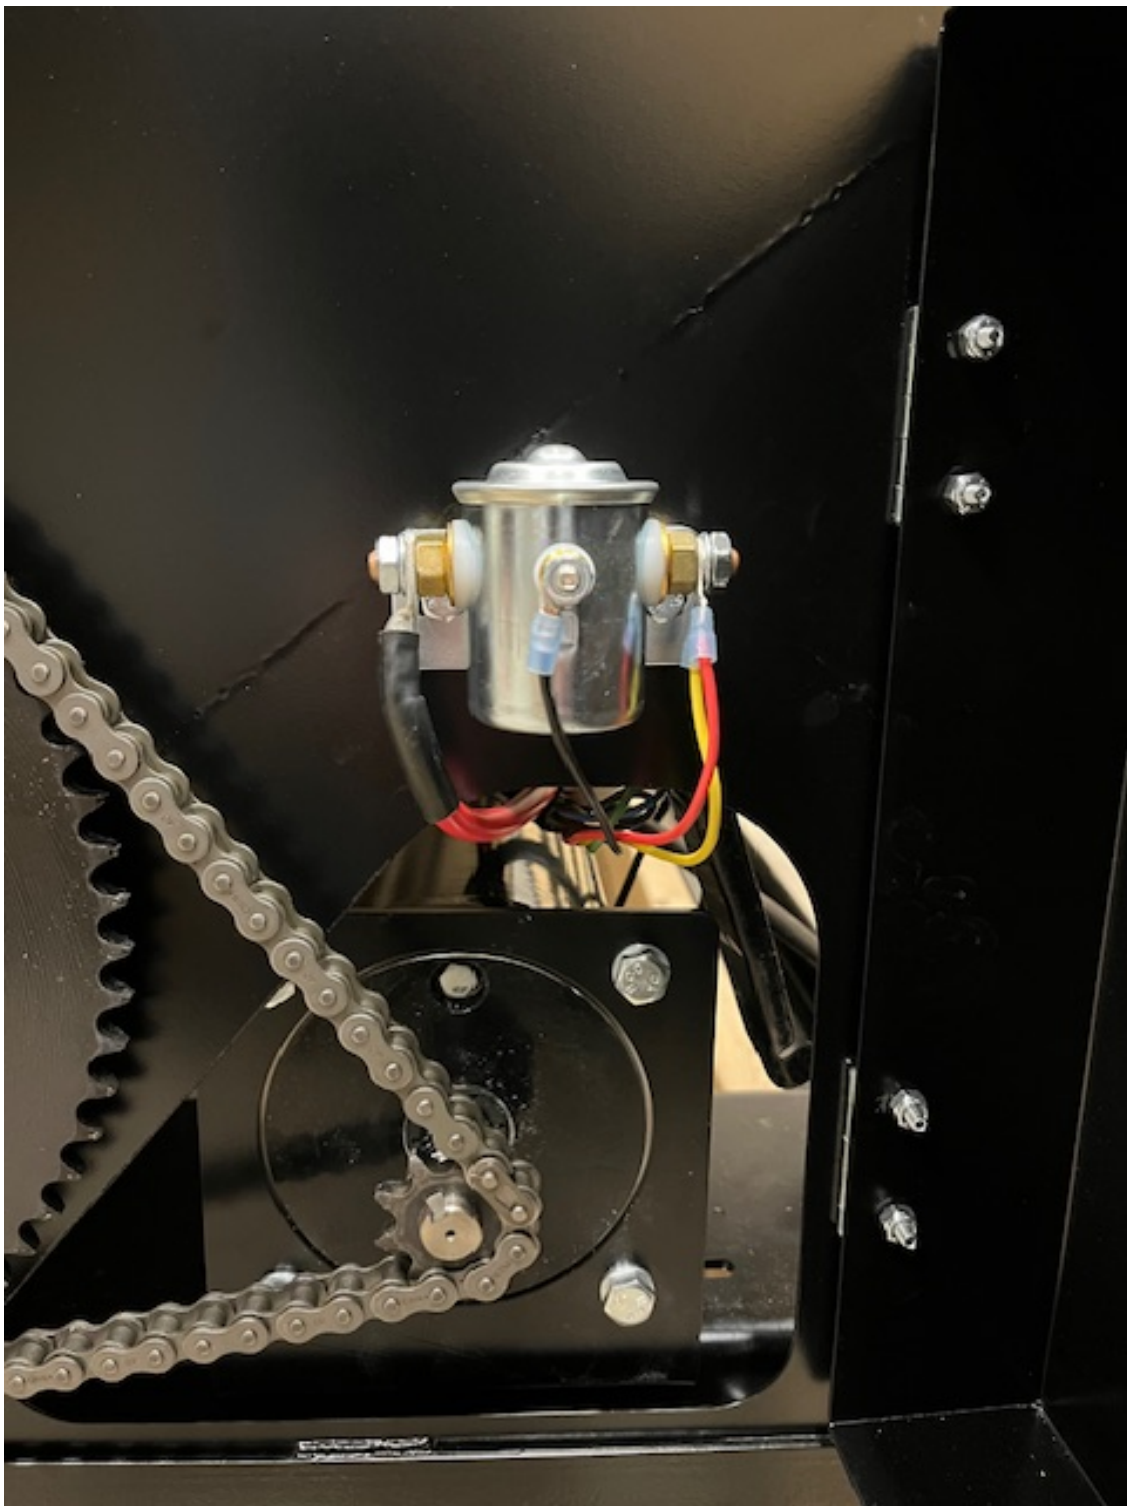

Start by disconnecting your battery! We have included 20' of power cable with the bonded ground for you to run from your vehicle battery to the feeder. Next, we have included 20' of Switch Cord to run from your cab to the feeder. Make sure that your unit can handle an extra 45 amps! It is recommended to put an in-line fuse of 60 Amps (NOT INCLUDED) between the SOLENOID and power source. Wire the RED/YELLOW wire coming off the switch wire and the POSITIVE (RED BATTERY CABLE) to the RIGHT side of solenoid on the 5/16 stud. Attach the BLACK wire coming off the switch wire to the little stud on front of solenoid. Next attach the Ground Wire coming from your battery (BLACK BATTERY WIRE) to the feeder anywhere by loosening one of the bolts and installing it there (PICTURE ON NEXT PAGE). Once everything is tightened you are ready to connect it to power. If you have any questions please call 1-800-369-4131!

YOU CAN ADJUST AUGER COVER UP/DOWN TO INCREASE/REDUCE FLOW OF FEEDS OR TO PREVENT CLOGGING OF DIFFERENT FEEDS BY LOOSENING THE 2 BOLTS ON BOTH SIDES AND SIMPLY RAISING/ LOWERING COVER AND ONCE YOU GET TO DESIRED POSITION TIGHTEN BACK DOWN. ANY QUESTIONS PLEASE CALL 1-800-369-4131



You can use the same bolt that your motor ground is attached to for the green ground wire

YOU CAN ADJUST AUGER COVER UP/DOWN TO INCREASE/REDUCE FLOW OF FEEDS OR TO PREVENT CLOGGING OF DIFFERENT FEEDS BY LOOSENING THE 2 BOLTS ON BOTH SIDES AND SIMPLY RAISING/LOWERING COVER AND ONCE YOU GET TO DESIRED POSITION TIGHTEN BACK DOWN. ANY QUESTIONS PLEASE CALL 1-800-369-4131

Next you can wrap the actuator wire around scale wires like shown below to keep from laying on bed and plug into actuator cord

After you get everything hooked up, you are ready to plug your scale cable/wire into the junction box and into your monitor

