

**STULL FEEDERS WARRANTY**

Your Stull Feeder is covered by a one (1) year Limited Warranty on material and workmanship from date of original purchase. Purchase must have been made through an Authorized Dealer. This warranty covers defects in workmanship and materials. This warranty does not apply to units damaged due to intentional abuse. Auger and Drag Feeder units are designed for bolting to a flat surface. If mounted on load cells for a scale you must use extra metal between load cell and bottom ends of feeder for reinforcement. We offer this for each feeder if not already installed. Failure to do so will void Warranty! Our auger feeders will dispense most types of feed/cubes, but may not all. Warranty does not cover this issue. An In-line Fuse of 50 amps for 300/600 Auger Feeders, 60 amps for the Truck Auger Feeders and 600 lb Drag Feeder is recommended but may not be provided.

A purchase from individuals, unauthorized dealers, or unauthorized Internet sites voids the warranty.

Scales are water resistant but not waterproof! Please do not pressure wash directly on scale monitor, connectors or junction box! FAILURE TO COMPLY WILL VOID WARRANTY! THIS SCALE SYSTEM MUST BE MOUNTED TO A SOLID FLAT SURFACE TO OPERATE CORRECTLY!! FAILURE TO DO SO WILL VOID WARRANTY!!

THIS WARRANTY DOES NOT APPLY TO CORROSION, RUST, ETC. AFFILIATED WITH PRODUCTS USED CONTAINING EXTREME SALT CONTENT.

Return authorization must be obtained from Customer Service at 800-369-4131 prior to returning product.

\*\*NOTE: There will be a 20% restocking fee on all returned feeders not associated to warranty issues.

www.stullfeeders.com

PLEASE RETURN BOTTOM PORTION WITHIN 30 DAYS OF PURCHASE. THANK YOU.



PRODUCT REGISTRATION

STULL FEEDERS, INC.

*First Name:* \_\_\_\_\_ *Initial:* \_\_\_\_\_ *Last Name:* \_\_\_\_\_

*Street:* \_\_\_\_\_ *Apt. #:* \_\_\_\_\_

\_\_\_\_\_ *State:* \_\_\_\_\_ *Zip:* \_\_\_\_\_

*E-Mail Address:* \_\_\_\_\_ *Phone #:* \_\_\_\_\_

*Date of Purchase:* \_\_\_\_\_ *Where Purchased:* \_\_\_\_\_

*Item Purchased:* \_\_\_\_\_

*Serial #* \_\_\_\_\_

Send Product Registration to:

STULL FEEDERS, INC.  
1595 Mountain Vista Rd., Harrison, AR 72601



**\*\*\*DISCONNECT POWER\*\*\***

- 1-INSERT GROMMET IN HOLE NEXT TO ROPE CLEAT
- 2-MOVE BRACKET ON CHUTE DOWN TO BOTTOM SET OF HOLES
- 3-REMOVE 2 EYE BOLTS AT TOP
- 4-BOLT BRACKET ON TOP SIDE OF ACTUATOR IN TOP 2 HOLES
- 5-REMOVE SMALL U BRACKET ON BOTTOM OF ACTUATOR
- 6-BOLT SMALL U ON CHUTE BRACKET AND LEAVE A LITTLE LOOSE
- 7-INSTALL BOTTOM OF ACTUATOR BACK TO SMALL U WITH PIN AND CLIP
- 8-WIRE SWITCH TO SOLENOID AS SHOWN ON LEFT. RED/YELLOW GO TO BIG STUD WITH POSITIVE BATTERY CABLE, BLACK GOES ON SMALL STUD & GREEN IS GROUND TO ANY BOLT CLOSE ON FEEDER.
- 9-RUN ACTUATOR CORD THRU GROMMET AND PLUG ACTUATOR END INTO PLUG ON SWITCH WIRE. USE SMALL CLIPS PROVIDED TO HOLD UP LOOSE WIRES USING 2 SMALL HOLES ON BOTTOM BRACE
- 10-ADJUST SMALL U BRACKET ON CHUTE WHERE CHUTE IS SNUG TIGHT SHUT AND TIGHTEN.
- 11-AT THIS TIME YOU CAN RECONNECT POWER AND OPERATE CHUTE UP/DOWN AND TEST RUN MOTOR TO MAKE SURE EVERYTHING WORKS
- 12-YOU WANT THE CHUTE TO SHUT SNUG TIGHT SO THIS MIGHT TAKE AN EXTRA ATTEMPT TO GET THAT ADJUSTED

**\*\*NOTE-THE 300 HAS A DIFFERANT BRACKET THAN SHOWN IN PICTURE ON TOP SIDE BUT BOLTING INSTRUCTIONS ARE STILL THE SAME\*\***