


BOX ASSEMBLY INSTRUCTIONS

1. Assemble Box Unit as shown in photo;
2. Mount struts using 3/8" Stove bolts to the side of Box, flush on one end (other end will extend beyond side as shown).
3. Mount Box to your UTV unit using 4 - 3/8" Stove bolts and mount the side with the extended strut to the driver's side of UTV. They will overhang the side of the UTV bed.
4. You can now install Box to the bed of your UTV by drilling through the bed of UTV, or mount Box to a piece of 3/4" plywood (not included) cut to the INSIDE measurement of your UTV bed (recommended) [also serves for quick removal of Feeder from UTV];
5. Once Box is assembled and mounted to UTV, assemble your Stull Feeder and mount to the struts on the Box.

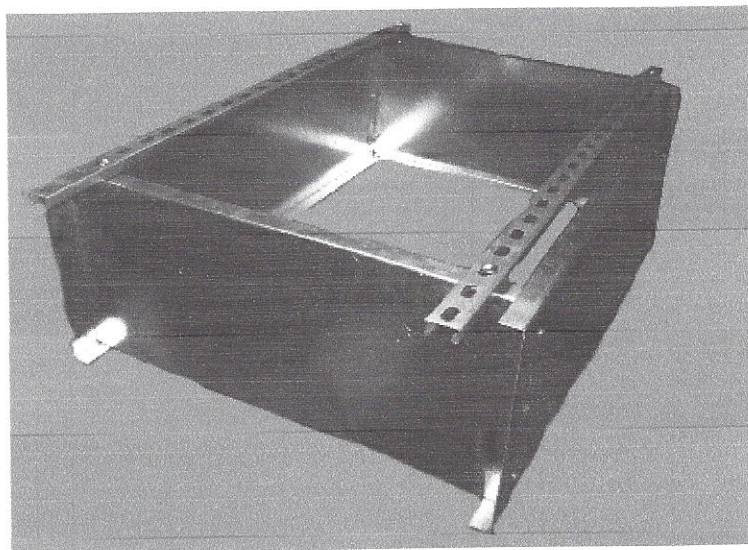

**For assistance or questions call
Stull Feeders at 800-360-4131**